

Before Recording

Recordable Discs

This unit can record to DVD-RW and DVD-R.



DVD-R can only be recorded once.

DVD-RW can be recorded to and erased many times.


Video Length

Before recording find out how long your video will be. Even if the VHS has hours in it you may only want 2hrs. Knowing how long your recording will be will help you set a recording mode.

Recording Mode

Recording modes dictate how compressed the video will be; larger compression rates, such as LP, EP and SLP, may result in the video getting too pixelated.

Recording Mode	Recording Time	Video/Sound Quality
XP	60 minutes	High Quality
SP	120 minutes	Standard Quality
LP	240 minutes	Long Play
EP	360 minutes	Extended Play
SLP	480 minutes	Super Long Play

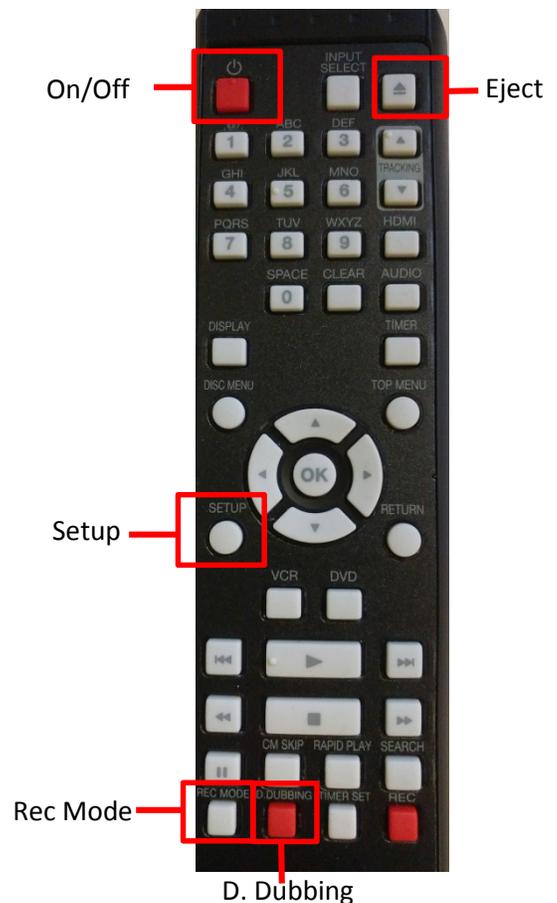

Recording

1. On the unit, press the "Source" button until the green light is under "DVD".




2. Press the "Eject" button and insert a recordable disc




3. The unit will load the disc



4. When Loading is complete, the screen will display the image below.

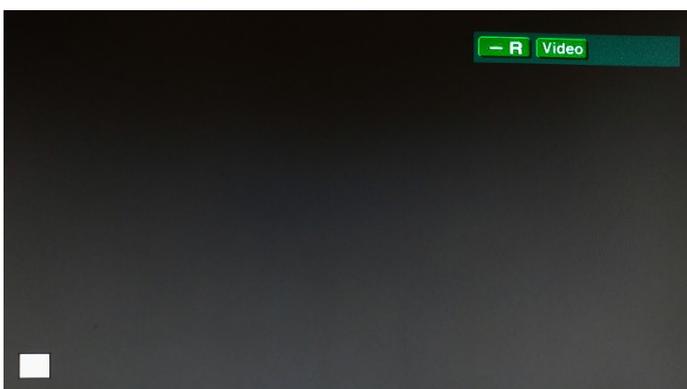

5. On the remote press "Rec Mode" to select how long the unit will record.

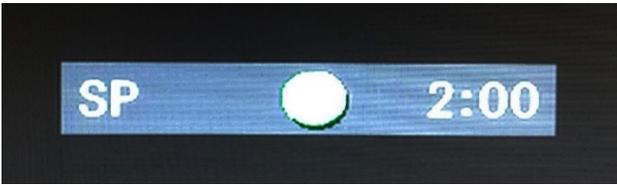

6 The timer on the unit will show your selected Rec mode.




7. On the unit, press the "Source" button until the green light is under "VHS".



8 Insert the VHS; find the starting point of your recording; press "Stop" when at starting point




- 9 On the remote press the “D.Dubbing” button to begin the conversion. This message will appear on the screen

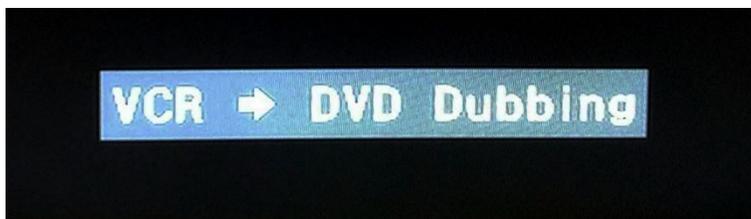

- 10 The timer on the unit will display a “DB” and a counter



- 11 When the recording is finished, either by pressing stop or the recording mode time has been reached, the screen will display the following message.

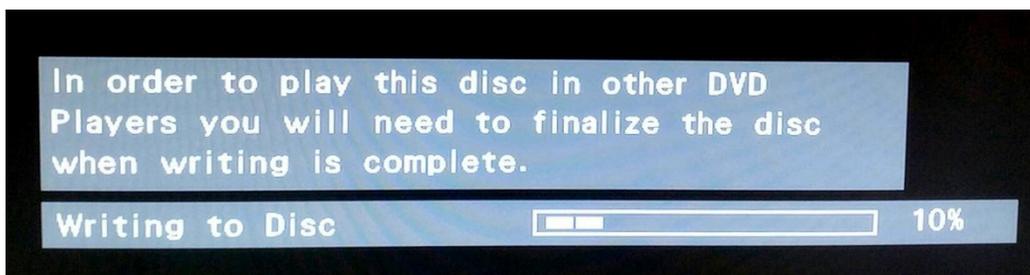

- 12 When writing process is complete the screen will turn black. Proceed to the finalizing process on the next page.


Finalizing

Finalizing a disc will allow it to be playable on other dvd players.


1. Press the "Setup" button on the remote and select "DVD Menu"



2. In the DVD Menu select "Finalize"

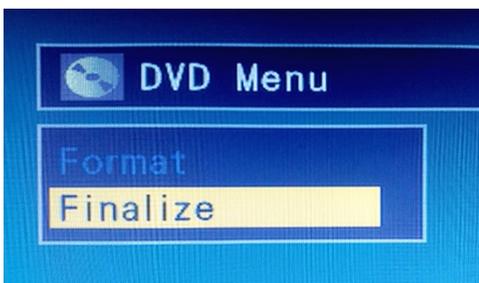

3. Select "Yes" in the "Finalize disc?"

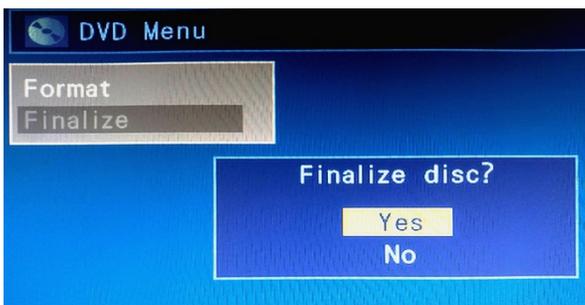

4. The disc will begin to finalize, this may take a few minutes. When finished the disc is ready and can be ejected.

